


Einbauanleitung Paris Geländer gerade mit mitlaufenden Edelstahlstäben

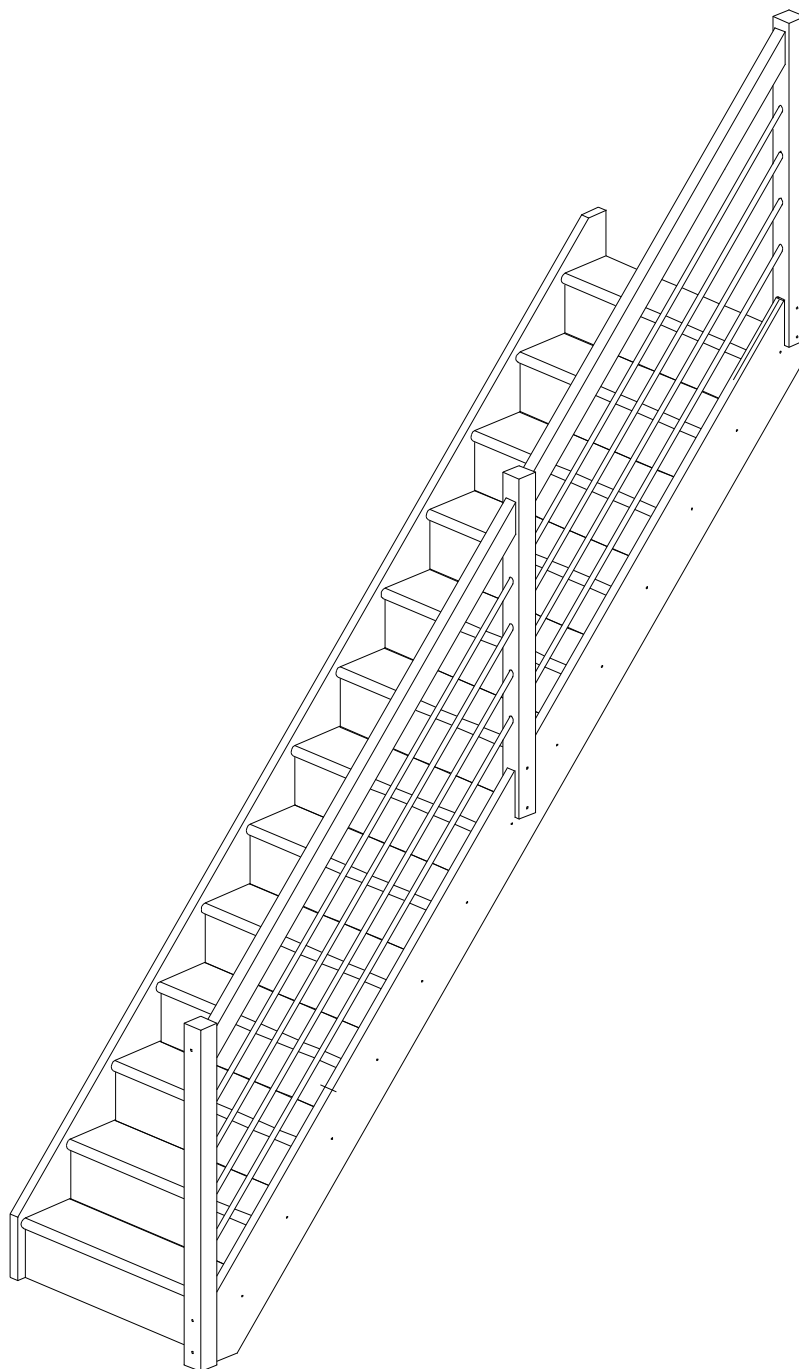


①




A
x1




B
x1



C
x1

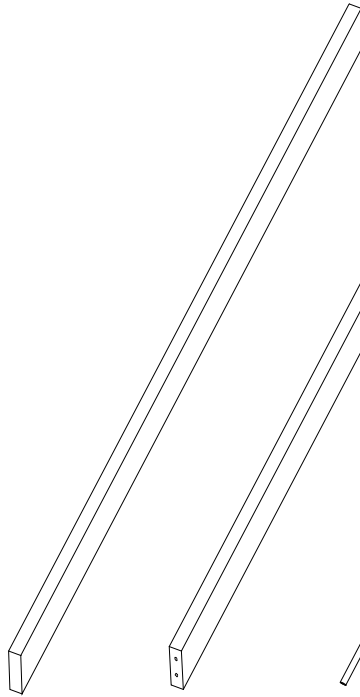


D
x1

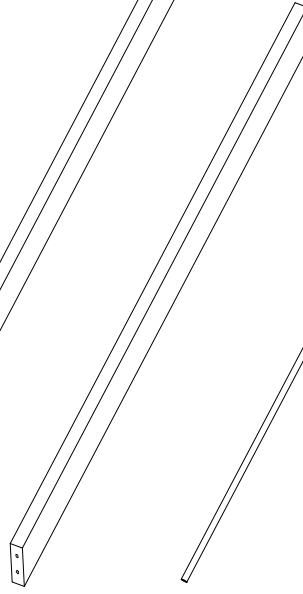








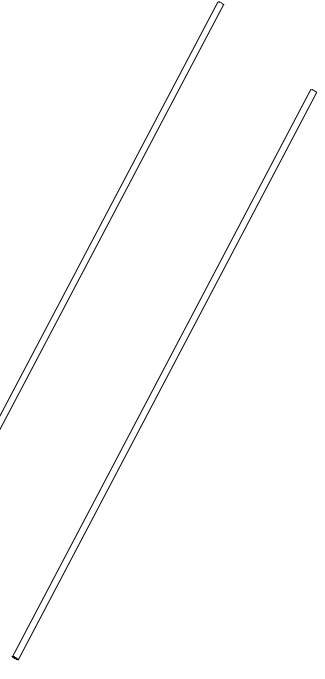


E
x1



F
x4



G
x4

 ① x4 5x100	 ② x8 4x40	 ③ x2 ϕ 40	 ④ x2 M8x55	 ⑤ x2
 ⑥ x2	 ⑦ x2	 ⑧ x4 ϕ 10	 ⑨ x12 ϕ 10	 ⑩ x1

2

